

Shock Monitor

Electric power detection type overload protector

Instruction Manual

Model No.: TSM4000H2
TSM4000H2P

Load Slaved Tracking Type



CAUTION

- Please read this instruction manual carefully and understand the contents before starting the installation, connection (wiring), operation, and maintenance/inspection of this product.
- Ensure that this instruction manual is delivered to the end users who will actually use this product.
- Keep this instruction manual safe from loss until this product is discarded.
- This product is subject to change without prior notice.

TSUBAKIMOTO CHAIN CO.

Table of Contents

1. Introduction.....	1	9. Connection Diagram.....	10
2. Safety Precautions.....	1	9.1 Basic connection	
3. Usage.....	3	(Driven by commercial power supply)	10
3.1 What is an H2 model?.....	3	9.2 Driven by inverter.....	11
3.2 Other functions	3	10. Operation.....	12
4. Checking the Package Contents..	4	10.1 LED indicators and operation keys	12
4.1 Model number meaning		10.2 Switching modes.....	13
(Main unit + Current sensor)4		10.3 Monitor mode.....	13
5. Part Names	4	10.4 Test mode.....	14
6. Installation.....	5	10.5 Program mode.....	14
6.1 Installation environment	5	11. Troubleshooting.....	20
6.2 Mounting orientation and space..	5	12. Trip Recovery Procedure.....	21
7. Wiring	5	13. Precautions on Maintenance/Inspection	21
8. Terminal Functions	7	14. Periodic Inspection.....	21
8.1 Terminal block.....	7	15. For Your Safety.....	21
8.2 Connector CN1.....	8	16. Specifications.....	22
		17. Outer Dimensions.....	23
		18. Warranty.....	24

1. Introduction

Thank you for purchasing the Shock Monitor.

This instruction manual describes from the installation, wiring, operation, through maintenance and inspection of the Shock Monitor. Please read this manual carefully and take due caution while handling the device.

2. Safety Precautions

- Be sure to read this manual and other attached documents carefully before starting the installation, wiring, operation, and maintenance/inspection to ensure proper use.
- Familiarize yourself with all of the knowledge of the devices, safety information, and precautions before using the Shock Monitor.
- After reading this manual, be sure to keep it in a place where users can access any time.
- This instruction uses two levels of safety precautions: WARNING and CAUTION.

 WARNING	Failure to follow instructions may lead to dangerous situations where death or severe injury can occur.
 CAUTION	Failure to follow instructions may lead to dangerous situation where medium to light injury or property damage can occur.

Even if the instructions are followed, a serious consequence may result depending on the situation.

Be sure to exercise due caution and follow all of these important instructions.

WARNING

- Use the product described in this instruction manual by observing safety-related laws and regulations such as Ordinance on Industrial Safety and Health.
- Observe the following during the installation, removal, or maintenance/inspection of the product:
 - (1) Turn off the power switch.
 - (2) Do not go below any equipment which may fall and drop.
 - (3) Secure moving parts of the equipment so that they will not move unexpectedly.
 - (4) Wear appropriate clothing and protective gear for the work.
- Before starting trial operation or regular inspection, be sure to confirm the operation so that the Shock Monitor properly works as a protection device.
- The Shock Monitor main unit is subject to conditions when it is used for a megger test. Follow the instruction in the instruction manual.
- Do not work while the line is live. Be sure to turn off the power before starting work. **Otherwise, an electric shock may result.**
- The wiring, energization/operation, and maintenance/inspection of the Shock Monitor must be done by an engineer with expert knowledge. **Otherwise, an electric shock, injury, or fire may result.**
- Be sure to ground Terminal E of the Shock Monitor. **Otherwise, an accident may result.**
- When using a 400 VAC motor power supply, ensure that the Shock Monitor unit and 400 V resistor are connected properly. **Otherwise, an electric shock or fire may result.**

CAUTION

- Ensure that this instruction manual is delivered to the end users. Also, let the end users carefully read the manual before using the Shock Monitor to ensure correct use.
- If you do not have the instruction manual, contact your TC dealer or a TC sales office and request a copy by specifying the product name, model number, etc.
- Do not disassemble the product or make additional work for modification.
- This product contains **several consumable parts (electrolytic capacitor, relay, etc.)**. Check functions and operation periodically according to the instruction manual. If any malfunction is found, contact your dealer for repair.
- **Do not use the Shock Monitor in an atmosphere where any corrosive gas exists. Sulfidizing gases (SO₂, H₂S), in particular, cause corrosion of copper and copper alloy used in the printed circuit boards and components, resulting in breakdowns. Corrosion is further promoted in a highly humid environment.**
- Do not allow the entry of foreign matter such as lint, paper pieces, woodchips, dust, or metal chips into the Shock Monitor.
- Clean off dirt periodically because it may cause overheating of the product or fire.
- When discarding the product, dispose it as industrial waste.
- Terminal E of the Shock Monitor is connected to a noise filter. **This terminal must be grounded.** Otherwise, the product may not operate properly due to disturbance. (Refer to page 7.)
- Leakage current of 0.5 mA at maximum will flow the grounding wire from the power supply through the capacitor inside the noise filter. Consider this leakage current when selecting an earth leakage circuit breaker.
- **To prevent noises, route the sensor cable at least 15 cm away from an inverter, a servo driver unit, and other lines.**

3. Usage

3.1 What is an H2 model?

The TSM4000H2 is a product intended for load monitoring of general industrial machinery driven by a 3-phase induction motor with a load that fluctuates gradually over time under normal conditions. It detects abnormality by changing the monitoring level to track the fluctuation of the load.

Target machinery

Worm reducers or other equipment in which machine efficiency changes; equipment with poor load balance

Load detection method

The Shock Monitor captures the voltage and current of the motor used for driving equipment and detects the power consumption of the motor.


Overload recognition method

The Shock Monitor compares the detected load with the preset overload detection level. When the overload status continues for a specified period (Shock Time) or longer, the monitor notifies an external device of the abnormal load.

The H2 model provides overload protection based on the value obtained by adding a preset increase range (High1) to the load levels detected when the motor starts (when the Start Time finishes) and at each specified cycle. This is expressed by the following equation:

$$\text{Operating level} = \text{Detected load ratio} + \text{High1 setting value}$$

There is another level to monitor the load based on a fixed value without load tracking (High2).

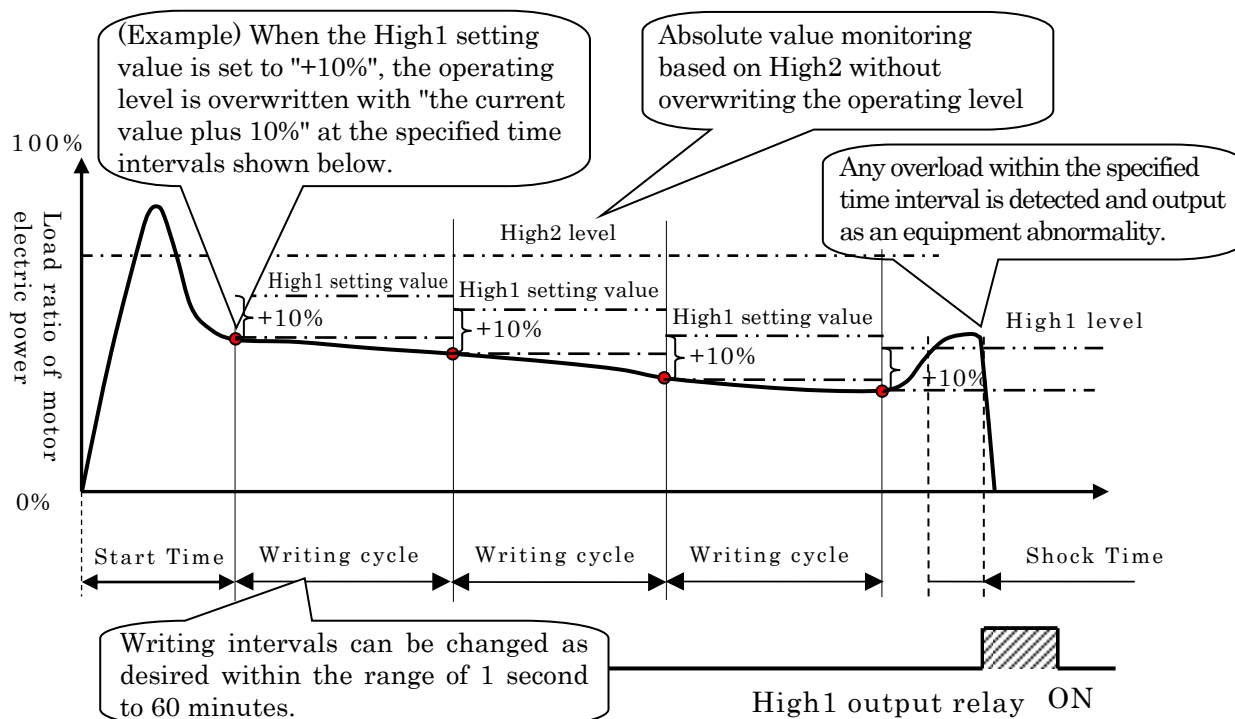

3.2 Other functions

Load condition recording

Detected electric power values can be output as analog voltage signals.

Output relay switching

The output relay can be switched between Self-Hold and Auto-Reset.

Power detection response setting

When the load pulsates frequently due to the resonance or jerking of the equipment, you can delay the response of the power detection. This suppresses the pulsation of the detected value and improves the accuracy of the detection of abnormal load.

Selecting the timing of reference value writing

The method of reference value writing can be selected from either by writing after each of the periods specified with a parameter (interval time) or writing triggered with external signals.

(In either case, writing is performed once when the Start Time finishes.)

4. Checking the Package Contents

Check the following about the product you purchased.

- (1) Do the model number and specifications on the name plate match your order?
- (2) Were there any damages suffered during transportation?
- (3) Are the following contents included? (For their appearances, refer to the outer dimensions on page 23.)

Shock Monitor unit (including a socket): TSM4000H2 (Panel mounting type: TSM4000H2P)

Current sensor: TSM-U*** or TSM-M***

Sensor cable: TSM4-S01

4.1 Model number meaning (Main unit + Current sensor)

- The model number of the combination of the main unit and current sensor consists of the model numbers of the main unit and sensor as follows:


TSM4000H2 - U010

Model No. of the main unit Model No. of the current sensor (Last 4 digits of TSM-U010)

- The model number of the sensor cable indicates the cable length as follows:
TSM4-S01 ... "01" means 1 m cable

The TSM4-S01 sensor cable is included as an accessory. If this cable length is insufficient, optional cables of 3 m, 5 m, 10 m, 20 m and 30 m are available. Contact TC when necessary.

5. Part Names

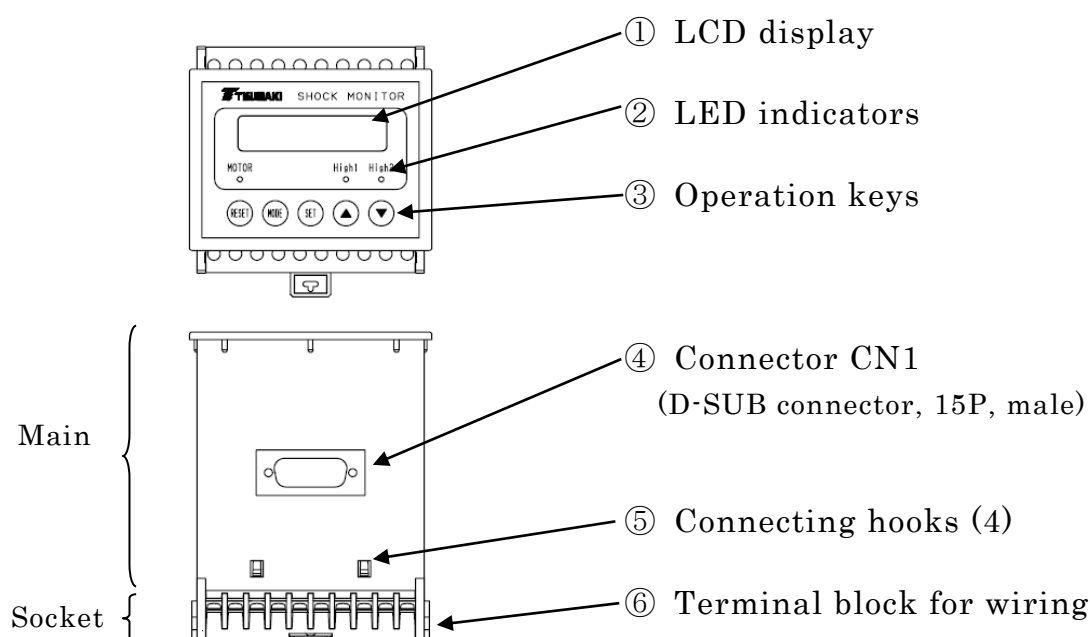

- ① LCD display ...Shows load ratio, setting values and parameter settings.
- ② LED indicators ...Indicates that the motor is running and that the output relay is activated.
- ③ Operation keys ...Keys used for switching the displayed mode or for changing parameters.
- ④ Connector CN1 ...Connector for using signals such as control input or analog output.
- ⑤ Connecting hooks ...Used to connect/disconnect the main unit to/from the socket.
For connection, fully insert the main unit until the hooks lock securely.
For disconnection, press down the four hooks simultaneously and remove the main unit from the socket.
- ⑥ Terminal block for wiring...Terminals for connecting an operational power supply, motor voltage, relay output, current sensor cable, etc.


6. Installation

6.1 Installation environment

Install the Shock Monitor in a place where the following conditions are satisfied:

- Location where the ambient temperature is between 0 to 50°C and the Shock Monitor is not exposed to direct sunlight
- Location where the relative humidity is between 45 to 85%, no condensation or freezing occurs, and no water splashes onto the Shock Monitor
- Location where no dust, corrosive gases, or oil mist exist
- Location where the altitude is 1000 m or less and vibration is 4.9 m/s² or less

6.2 Mounting orientation and space

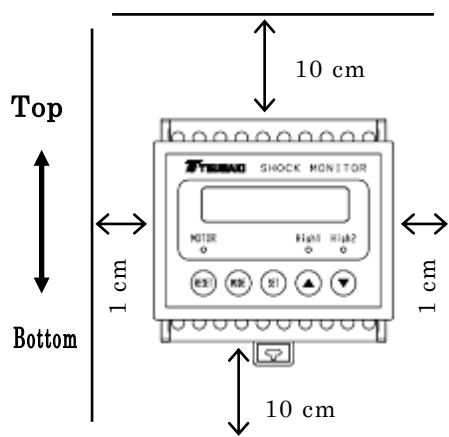

• Mounting method


Insert M4 screws into the DIN rail or the mounting holes of the socket and attach the main unit. Mount the Shock Monitor so that its panel is oriented vertical to the ground. Mounting it upside down or horizontally may cause overheating and breakdown.

• Space

To ensure the dissipation of the heat generated from the Shock Monitor, provide spaces as shown in the figure on the left from other equipment, walls, and wiring ducts.

• Panel mounting type (TSM4000H2P)

Mount the Shock Monitor as shown in the figure on the right.

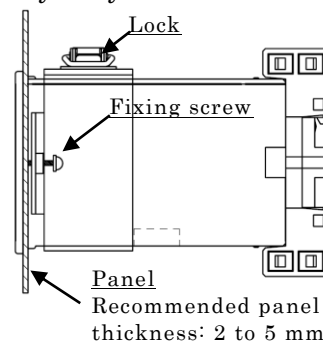

Tighten the fixing screw with the tightening torque of 0.12 to 0.16 N·m. Provide a space of 50 mm or more above the main unit housing to allow access to the lock.

 


CAUTION

- Do not allow the entry of foreign matter such as lint, paper pieces, woodchips, dust, or metal chips into the Shock Monitor.
Otherwise, a fire or accident may result.

7. Wiring


- ① Complete wiring by using only the socket before attaching the Shock Monitor main unit to the socket.
- ② Connect a commercial power supply of 90 to 250 VAC, 50/60Hz or a DC power supply of 90 to 250 VDC (no polarity) to the POWER terminals (11 and 12). Do not connect the output from an inverter or a servo driver. An erroneous connection as such may cause breakdown.
- ③ Use a ring type crimp terminal shown on the right to connect the power supply cable and the terminal block for wiring.
Limit the tightening torque to 0.5 to 0.6 N·m.
- ④ When the connection (wiring) is completed, check the following:
 - a. Are the wires connected properly?
 - b. Are there any remaining disconnected wires?
 - c. Are there any short-circuits or ground fault conditions occurring between terminals or wires?
- ⑤ After the connection is complete, fully insert the main unit to the socket until the hooks lock securely.



WARNING

- Be sure to ground the grounding wire.
Otherwise, an electric shock or fire may result.
- The wiring must be done by an electric work specialist.
- Confirm that the power is turned off before start wiring work.
Otherwise, an electric shock may result.

⑥ Current sensor

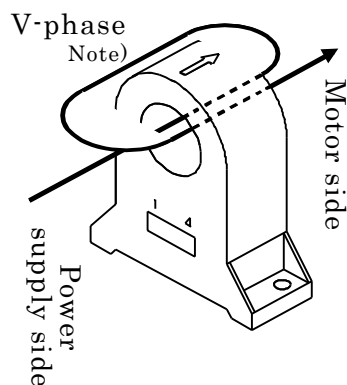

To detect motor current, pass the V-phase motor wire through the sensor in the direction from the power supply side to motor side as shown by the arrow. Make sure that the direction of the wire matches with the arrow on the top of the current sensor. The number of times to pass the wire through the sensor depends on the motor capacity and voltage. Refer to the following table for the specified number.

The figure on the left shows the case where the number of times to pass the wire through the sensor is two (2).

(Note) Refer to the connection diagrams on pages 10 and 11 for the current sensor wiring and be sure to pass through the motor wire of the correct phase which is connected with the voltage input terminal V[2] of the TSM4000. If the wire of the other phase is connected, or the wire is passed through in the opposite direction, the electric power cannot be detected properly. This wiring is unrelated to the positive/reverse phase of the power supply or of the forward/reverse rotation switching of the motor.

■ Number of times to pass the wire through the sensor


Motor capacity (kW)	200/220 VAC motor			400/440 VAC motor		
	Motor rated current (A)	Sensor model No.	No. of times to pass wire through sensor	Motor rated current (A)	Sensor model No.	No. of times to pass wire through sensor
0.1	0.71	TSM-U010	6	0.36	TSM-U010	12
0.2	1.4	TSM-U010	3	0.70	TSM-U010	6
0.4	2.3	TSM-U010	2	1.2	TSM-U010	3
0.75	3.6	TSM-U050	6	1.8	TSM-U010	2
1.5	6.6	TSM-U050	3	3.3	TSM-U050	6
2.2	9.2	TSM-U050	2	4.6	TSM-U050	5
3.7	15	TSM-U050	1	7.5	TSM-U050	3
5.5	22	TSM-U050	1	11	TSM-U050	2
7.5	29	TSM-U100	1	15	TSM-U050	1
11	42	TSM-U100	1	21	TSM-U050	1
15	55	TSM-U150	1	28	TSM-U100	1
18.5	67	TSM-U150	1	34	TSM-U100	1
22	78	TSM-U200	1	39	TSM-U100	1
30	107	TSM-M300	1	54	TSM-U150	1
37	132	TSM-M300	1	66	TSM-U150	1
45	160	TSM-M400	1	80	TSM-U200	1
55	198	TSM-M600	1	99	TSM-M300	1
75	270	TSM-M600	1	135	TSM-M300	1
90	320	TSM-M800	1	160	TSM-M400	1
110	384	TSM-M800	1	192	TSM-M400	1

The motor rated current values in the table are for reference only.

■ Connecting the sensor cable to the main unit

Connect the sensor cable TSM4-S01 included in the package properly to the current sensor and Shock Monitor main unit respectively. If the cable length is insufficient, longer cables are optionally available. Refer to page 4 for the model number of the sensor cable and contact TC for ordering.

8. Terminal Functions

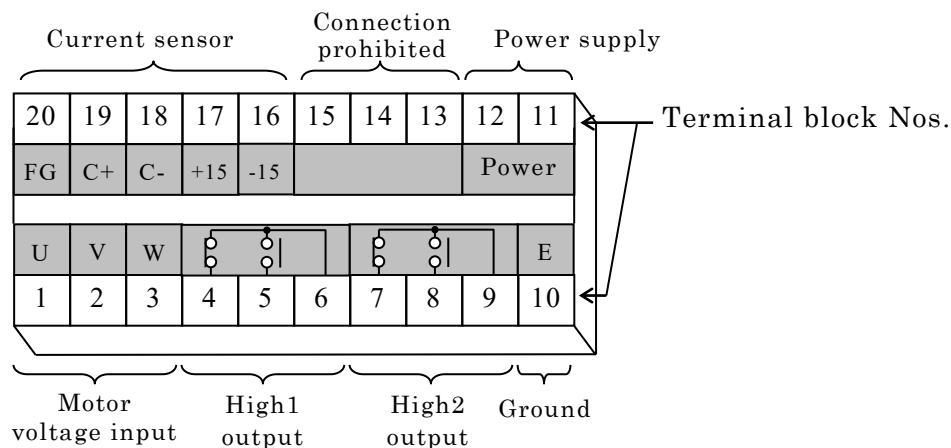



8.1 Terminal block

Terminal	Description
[Power supply/ground] Leakage current 0.5 mA max.	- Power supply (Terminals 11 and 12) - Terminals used to connect the power supply for the Shock Monitor. Connect a commercial power supply of 90 to 250 VAC or a DC power supply of 90 to 250 VDC (no polarity). Never connect the output of an inverter or a servo driver (which may cause breakdown). - E (Terminal 10) - A noise filter is connected. This terminal must be grounded. - Leakage current of 0.5 mA at maximum will flow through the grounding wire from the power supply through the capacitor inside the noise filter.
[Sensor cable connection] Current sensor	Connector used to input the signals from the current sensor. CAUTION To prevent noises, route the sensor cable at least 15 cm away from an inverter, a servo driver unit, and their output lines.
[Voltage input] 200/220 VAC 400/440 VAC 400 V class resistor TSM4-PR1	- U, V, W (Terminals 1, 2, 3) - Terminals used to input the voltage applied to the motor into the Shock Monitor. When a 400 V class motor is connected, be sure to connect the 400 V class resistor as shown on the left. Direct connection of a 400 V class motor may cause breakdown. A current of about 2 mA (AC) will flow through each terminal.


Terminal	Description
[Output relay]	• Output relay High1 (Terminals 4, 5, 6), High2 (Terminals 7, 8, 9) • Output terminals used to notify external devices of an alarm or overload condition. Two relay signals, High1 and High2 will be output. Contact specification: 1c contact: 250 VAC, 0.5A (Inductive load $\cos\phi = 0.4$) Notes: • When an electromagnetic contactor is connected as shown in the left figure ①, limit the operating coil capacity to less than 100 VA at power-on and to less than 10 VA during retention. If an electromagnetic contactor with larger capacity is connected, activate an auxiliary relay with the output of the Shock Monitor as shown in the left figure ②, and then open/close the electromagnetic contactor with the contact of the auxiliary relay. • As shown in the left figure, mount a CR absorber to the coils of the electromagnetic contactor and auxiliary relay to prevent noise generation. • When a sequencer photocoupler input which operates with minute current (10 mA or less) is connected, activate a relay for minute current with a relay output, and then connect the contact of the relay for minute current to a sequencer photocoupler input.

8.2 Connector CN1

Terminal	Description
[Contact input] [Non-contact input]	• X1 (CN1 pin No. 1) • Write the operating level. • This setting is enabled when "(2) X1" is selected for parameter [12: OFFSET MODE]. When the section between X1 and CM is short-circuited, the operating level is set to the sum of the current load level and the value of parameter [4: High1Level]. • RST (CN1 pin No. 11) • Turning RST ON resets a relay in the self-holding status. Short-circuiting the section between RST and CM resets the self-holding status of the output relays High1 and High2. Note: When setting [Non-contact input], be sure to use an open collector signal shown in the left figure ①. Using ② or ③ may cause malfunction due to a detour circuit which may be created depending on the condition of the power supply.

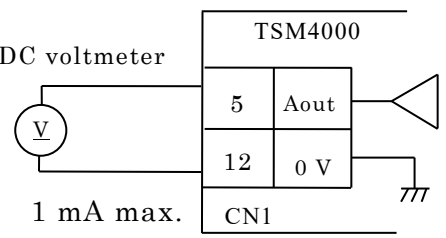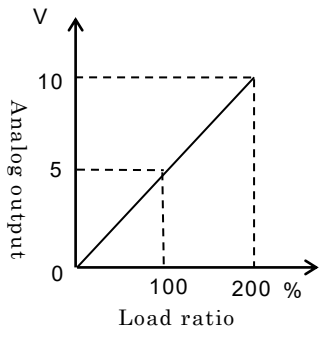Terminal	Description
Analog output 	During the monitoring in the Monitor mode, the load ratio is output as DC voltage signals. 

- Connector CN1 pin layout and I/O cable color

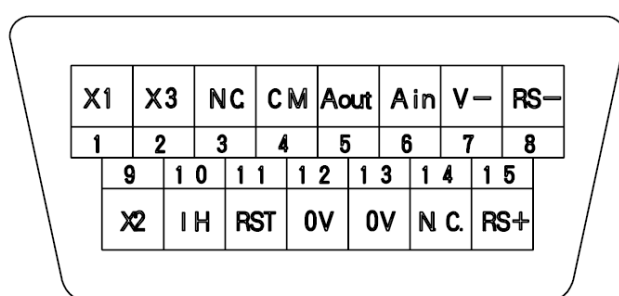


Note) Active terminals are: X1, RST, Aout, CM, and 0V.

Color	Pin No.	Signal name
Black	1	X1
White	2	X3
	3	N.C.
Red	4	CM
Green	5	Aout
Yellow	6	Ain
Brown	7	V-
Blue	8	RS-
Purple	9	X2
Gray	10	IH
Pink	11	RST
Sky blue	12	0V
	13	0V
	14	N.C.
Orange	15	RS+

- LCD contrast adjustment

If the LCD display is difficult to read, adjust it with the ▲ or ▼ key while holding down the SET key.

(Note that setting the display too dark shortens the life of the LCD.)

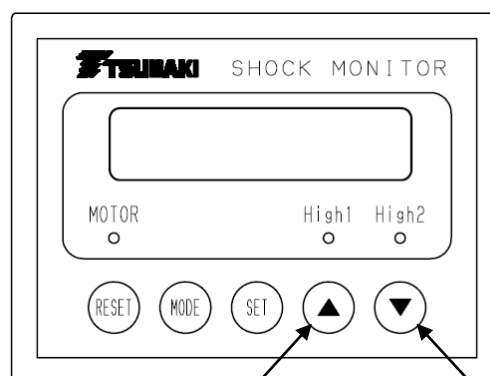


Hold down the SET key and press ▲ to make the display darker.

Hold down the SET key and press ▼ to make the display lighter.

9. Connection Diagram

9.1 Basic connection (Driven by commercial power supply)

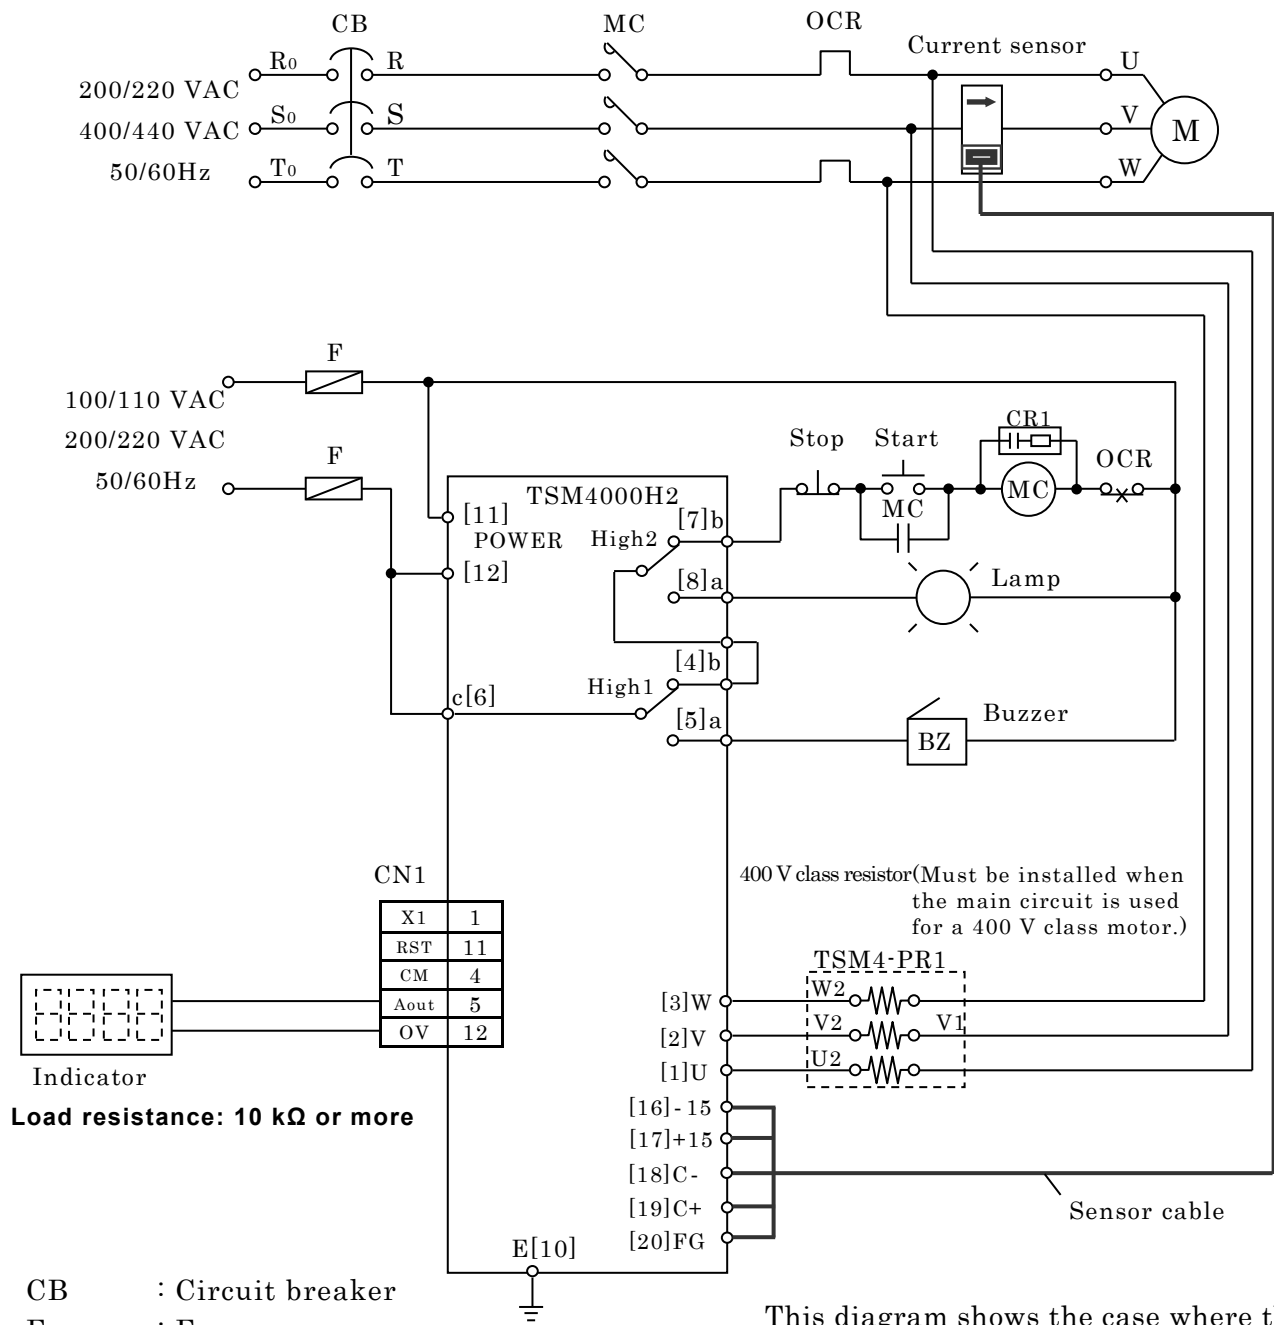


- CB : Circuit breaker
F : Fuse
MC : Electromagnetic contactor for motor
OCR : Overcurrent relay
CR1 : CR absorber (surge absorbing element)

This diagram shows the case where the electromagnetic coil capacity of the electromagnetic contactor for motor [MC] is less than 100 VA at power-on and less than 10 VA during retention.

Notes:

- (1) Use a current sensor which satisfies the requirement for motor capacity and voltage, and pass the motor wire through the sensor in the specified direction for the specified number of times.
- (2) Set the current sensor on the phase connected to the voltage detection terminal [2] (V-phase) of the Shock Monitor.
- (3) To monitor a 400V class motor, install the optional 400 V class resistor TSM4-PR1.

9.2 Driven by inverter

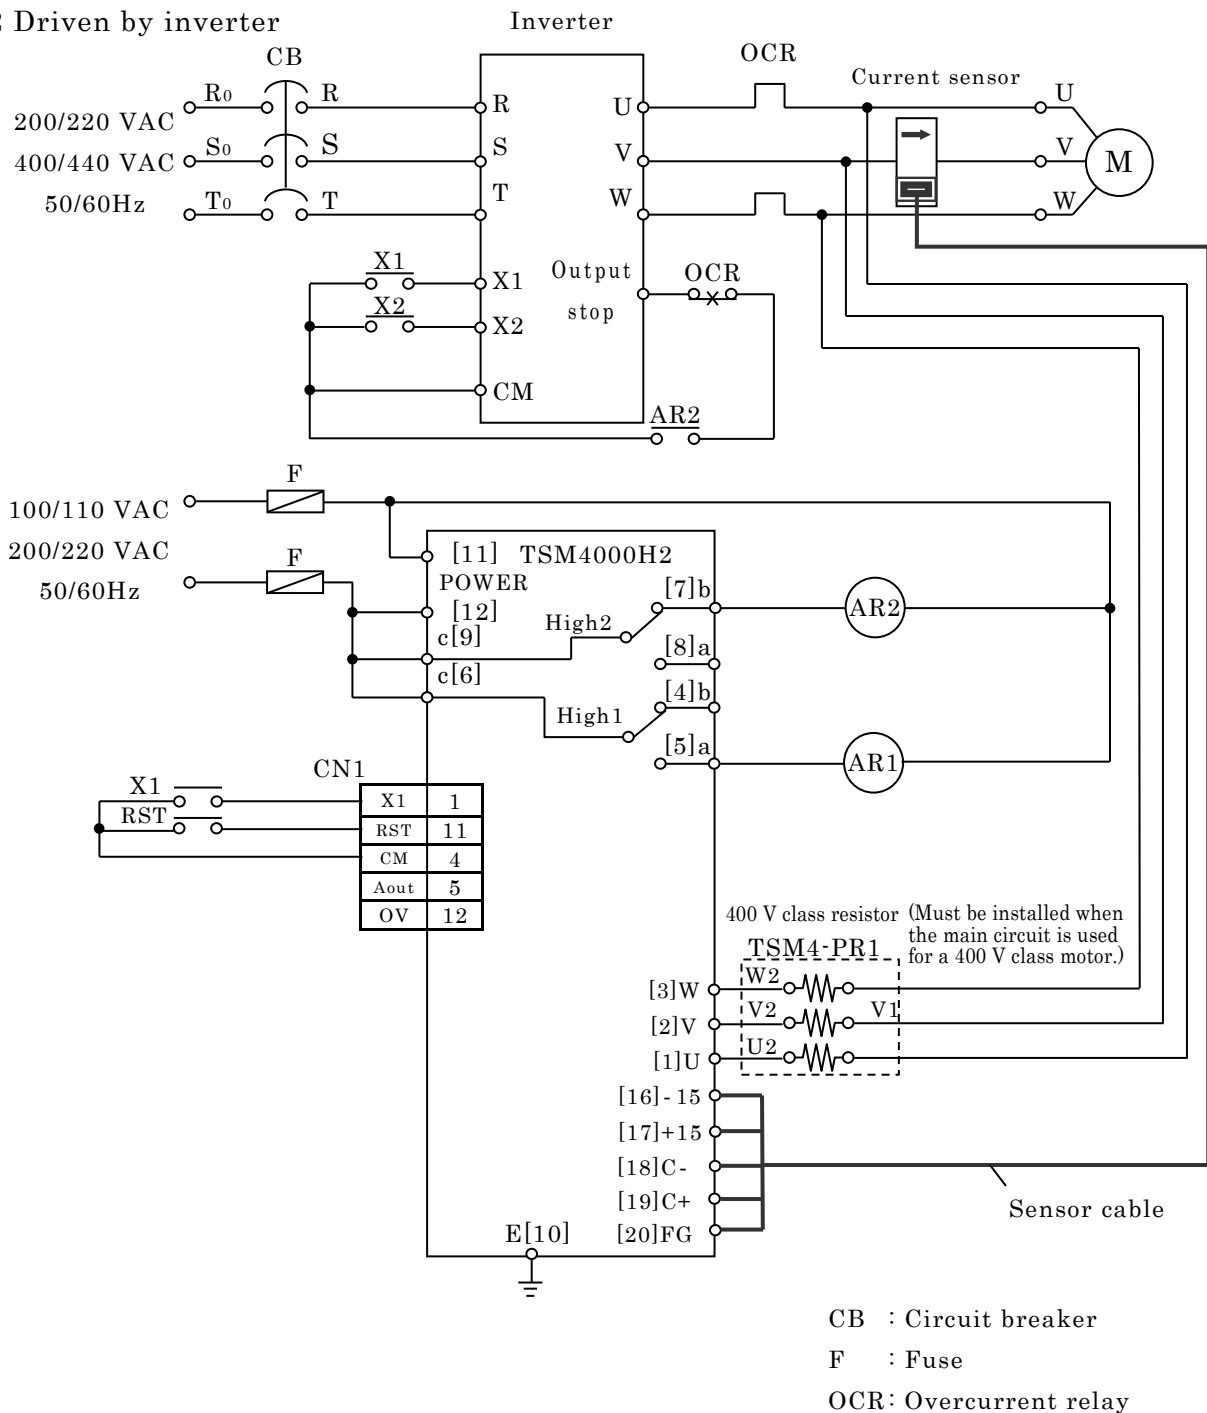


Notes:

- (1) Use a current sensor which satisfies the requirement for motor capacity and voltage, and pass the motor wire through the sensor in the specified direction for the specified number of times.
- (2) Set the current sensor on the phase connected to the voltage detection terminal [2] (V-phase) of the Shock Monitor.
- (3) To monitor a 400V class motor, install the optional 400 V class resistor TSM4-PR1.
- (4) Use relays for minute current for the contacts used for the input to [X1] and [RST].
- (5) Connect a commercial power supply to the operational power supply. (Do not connect the secondary side of the inverter.)

10 Operation

The Shock Monitor TSM4000 provides Monitor mode, Test mode, and Program mode, which can be selected with the **MODE** key.

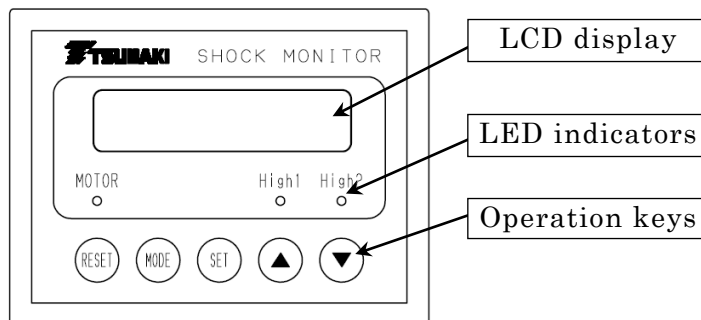

10.1 LED indicators and operation keys

		Monitor mode	Test mode (LCD shows "TEST MODE".)	Program mode
LED indicator	MOTOR 	• Illuminates when the input power of the motor exceeds 5% or the current exceeds 10% (flashes within the Start Time).		
	High1 	• Illuminates when the load reaches or exceeds the High1 level. • Flashes when relay output High1 is activated.	• Flashes when relay output High1 is activated.	
	High2 	• Illuminates when the load reaches or exceeds the High2 level. • Flashes when relay output High2 is activated.	• Flashes when relay output High2 is activated.	
Operation key	RESET 	• Reset the self-holding status of the output relay.	• Reset the self-holding status of the output relay.	• Return to parameter 1.
	MODE 	• Show the Test/Program mode switching screen.	• Change to the Monitor mode.	• Change to the Monitor mode.
	SET 	• Change the monitor screen.	• Conduct the operation test of the relays. (Relay output, LED indicator) *1	• Save the parameter and move to the next parameter.
		Hold down SET and press ▲ to make the LCD contrast darker.	• Select the relay to activate. (High2⇒High1)	• Select data or increment a setting value.
		Hold down SET and press ▼ to make the LCD contrast lighter.	• Select the relay to activate. (High2⇒High1)	• Select data or decrement a setting value.


*1 While the motor is stopped, the relay output is activated after the Start Time or Shock Time whichever is longer elapses; while the motor is running, the relay output is activated after the Shock Time elapses.

10.2 Switching modes

When the Shock Monitor is turned on, the initial screen is displayed for about three seconds, and then the device enters the Monitor mode.

The Monitor mode is used for load monitoring.


To change parameters, press the **MODE** key to go to the Program mode selection screen. Press the **SET** key to change to the Program mode. On the MODE selection screen, press the **MODE** key again to go to the Test mode selection screen. Press the **SET** key here to change to the Test mode. In the Test mode, you can activate the output relay to issue outputs. Press the **MODE** key to return to the Monitor mode.

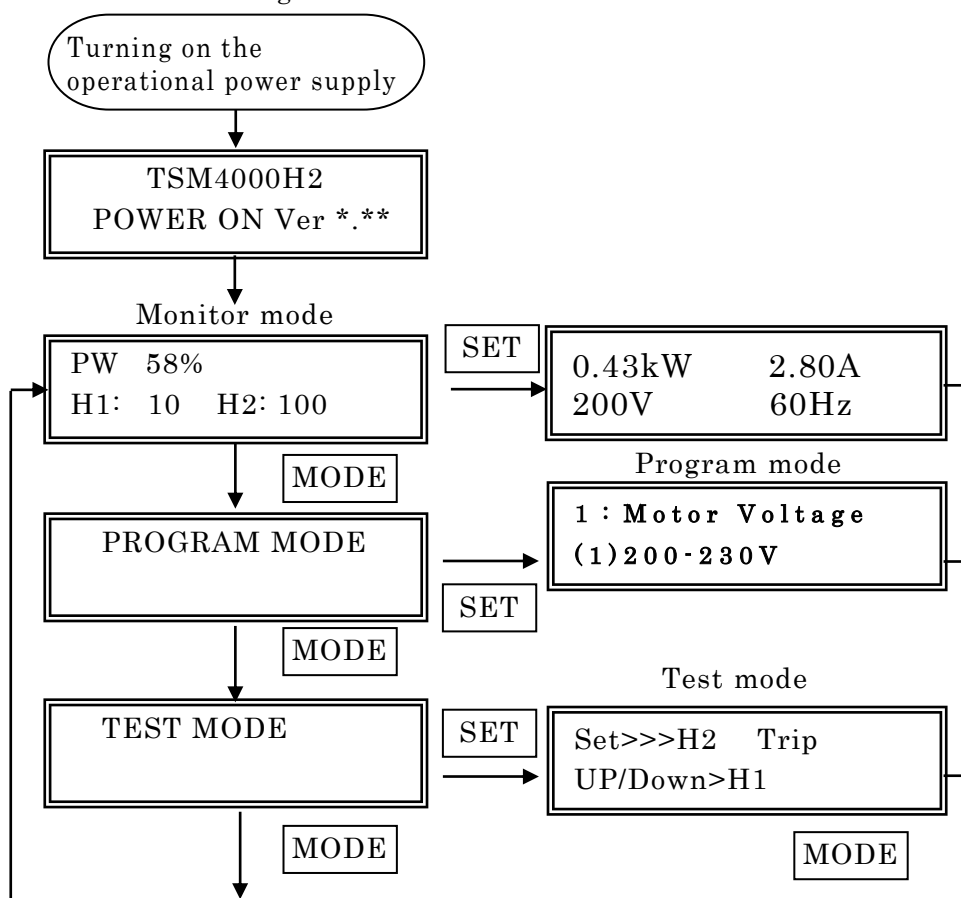

10.3 Monitor mode



The Monitor mode is used to actually monitor the load. The LCD display shows the current load ratio or the maximum load ratio detected, the setting values for High1, and High2.

For power monitoring, the displayed load ratio is a value calculated on the assumption that the selected motor capacity is 100%.

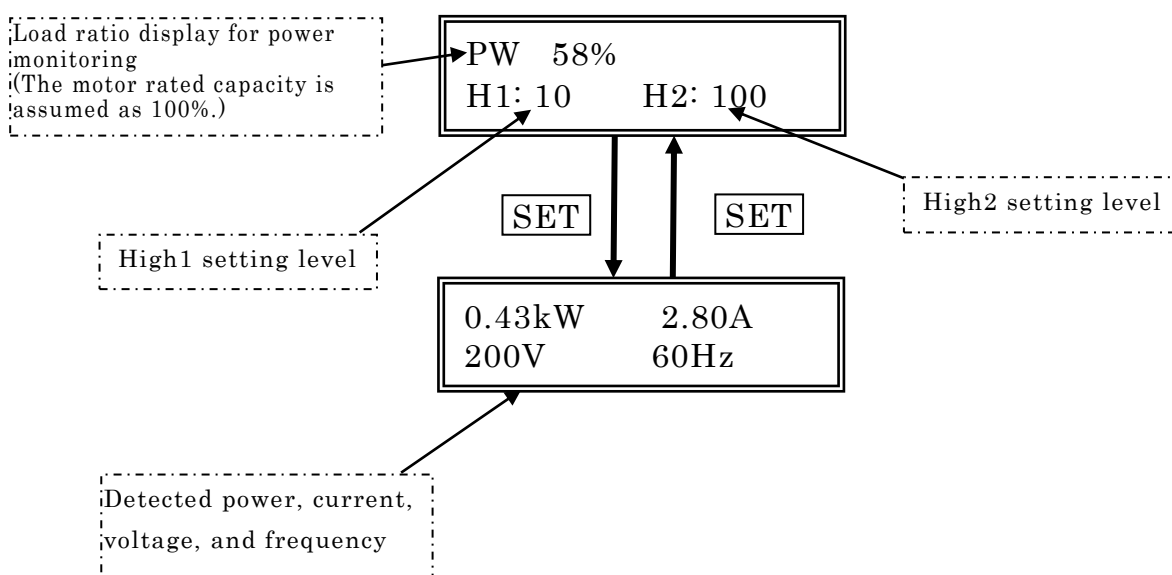


10.4 Test mode

In the Test mode, you can check the operation of the output relays and LED indicators. Since load monitoring is disabled in the Test mode, be sure to return to the Monitor mode after the operation (or after pressing RESET when the relay output is in the self-holding status).

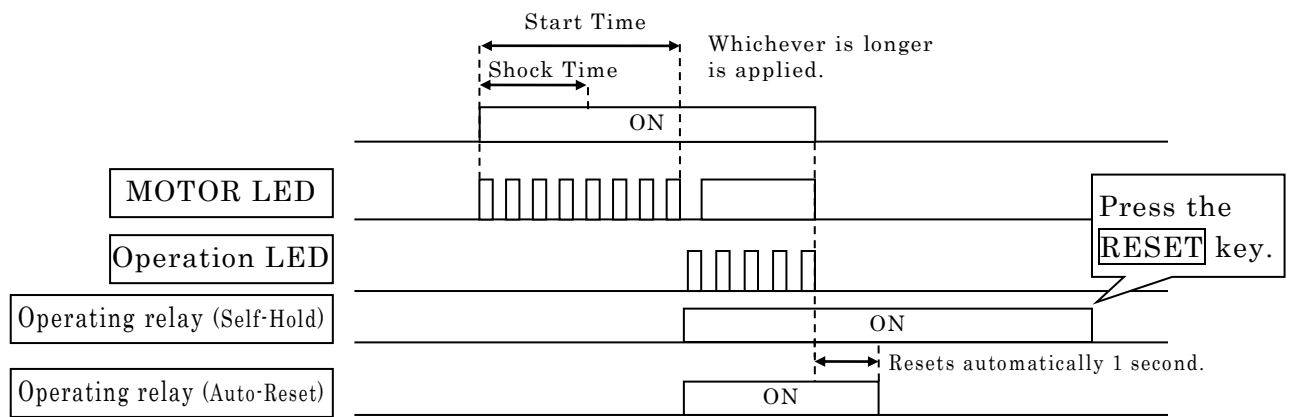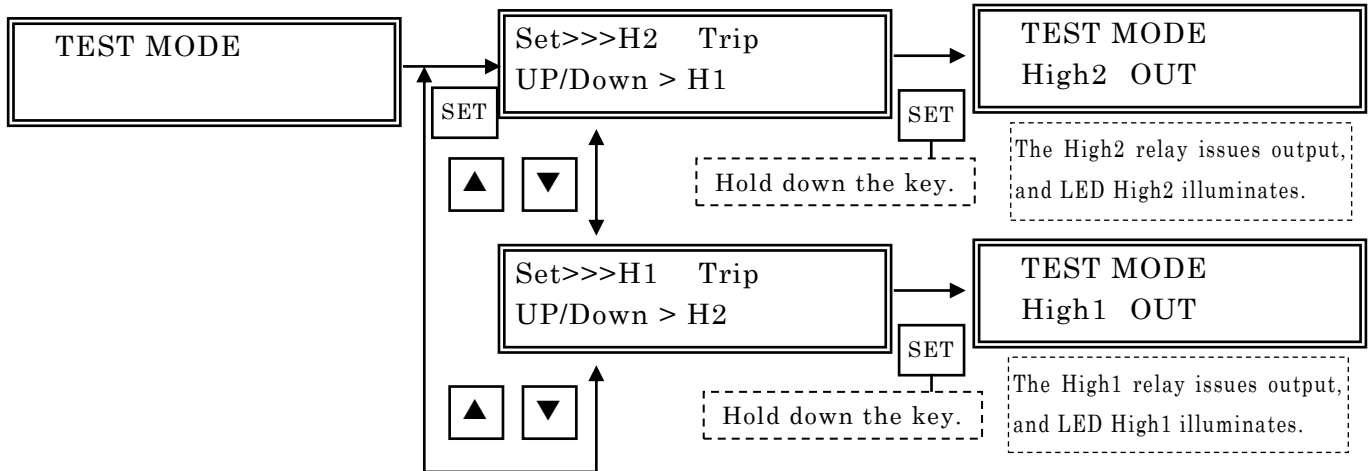

10.5 Program mode

The Program mode is used for changing and checking parameters.

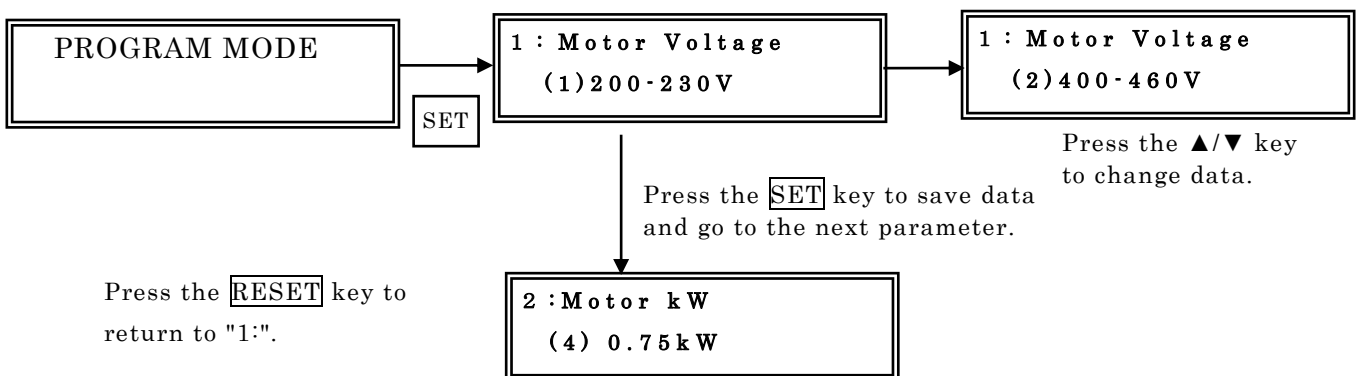

■ Parameter description and setting procedure

Parameter (Default data is shown.)	Data		Description
Motor voltage setting 1: Motor Voltage (1) 200-230V ▲ ...Select data. ▼ SET...Make the set data effective.	(1)200-230V		• Select (1) to monitor a 200 V class motor. The allowable maximum voltage is 250 VAC.
	(2)380-460V		• Select (2) to monitor a 400 V class motor. The allowable maximum voltage is 500 VAC. Monitoring a 400 V class motor requires the installation of the optional 400 V class resistor.
Motor capacity setting 2: Motor kW (4) 0.75kW ▲ ...Select data. ▼ SET...Make the set data effective.	(1)0.1kW	(11)15kW	Set the capacity of the motor to be monitored. The load ratio display of the Shock Monitor shows 100% when this motor capacity is detected. When a motor other than listed is used, select the nearest capacity.
	(2)0.2kW	(12)18.5kW	
	(3)0.4kW	(13)22kW	
	(4)0.75kW	(14)30kW	
	(5)1.5kW	(15)37kW	
	(6)2.2kW	(16)45kW	
	(7)3.7kW	(17)55kW	
	(8)5.5kW	(18)75kW	
	(9)7.5kW	(19)90kW	
	(10)11kW	(20)110kW	
Start Time setting 3: Start Time 3.0 s ▲ ...Increment the setting value. ▼ ...Decrement the setting value. SET...Make the set data effective.	0.1 to 20.0 s (Minimum setting increment: 0.1 s)		• To prevent unnecessary operation during the startup period of the motor, the Shock Monitor disables the relay output function for a specified period after it is started, even in the Monitor mode. • Counting starts when the detected electric power reaches 5% or the current reaches 10% of the rated current. • Set the period as short as possible based on the startup time of the motor. • The Start Time starts when the Shock Monitor returns from the Test mode or Program mode to the Monitor mode.

Parameter (Default data is shown.)	Data	Description
4:High1 Level 10% ▲...Increment the setting value. ▼...Decrement the setting value. SET...Make the set data effective.	High1 1 to 99%	Set the High1 output level. Output is activated when the load ratio reaches or exceeds this setting value for the period specified at 5:Shock Time or longer.
Shock Time setting 5:Shock Time H1 1.0s ▲...Increment the setting value. ▼...Decrement the setting value. SET...Make the set data effective.	MIN (Shock Time: Minimum)	[Time required for detection and output] • Motor power supply frequency: 50 Hz or more ... Approx. 50 ms • Motor power supply frequency: Less than 50 Hz ... 2 cycles + Approx. 10 ms (Example: 40 Hz.....60 ms)
	0.1 to 10.0 s (Minimum setting increment: 0.1 s)	• Period between the instant when the load ratio reaches or exceeds the setting value and the instant when the relay output is activated. • If the load ratio goes below the value of 4:High1 Level within the specified period, the relay output is not activated.
Relay output mode setting 6:Output Relay H1(2)Auto-Reset ▲ ...Select data. ▼ SET...Make the set data effective.	(1)Self-Hold (Self holding)	The status of the relay output is retained. The status is reset by pressing the RESET key or by an input to the [RST] terminal.
	(2)Auto-Reset (Automatic reset)	The status is reset one second after the relay output condition is cleared.
7:High2 Level 100% ▲...Increment the setting value. ▼...Decrement the setting value. SET...Make the set data effective.	High2 5 to 200%	Set the High2 output level. Output is activated when the load ratio reaches or exceeds this setting value for the period specified at 8:Shock Time or longer.

Contents

Safety

Usage
/NamesInstallation
/Wiring

Terminals

Connection

Operation

Maintenance
/Inspection

Specifications

Dimensions

Warranty

Parameter (Default data is shown.)	Data	Description	Contents
Writing interval setting 13: Interval Time 50s ▲ ...Select data. ▼ SET...Make the set data effective.	1 to 60 s 1.1 to 60 min	• Set the cycle to overwrite the monitoring level. This setting is effective when "(1) Interval" is set for 12: Offset Mode.	Safety
LCD backlight setting 14: LCD Backlight (1) Always ▲ ...Select data. ▼ SET...Make the set data effective.	(1) Always	The backlight illuminates all the time.	Usage / Names
	(2) 2min	The backlight will turn off two minutes after the last key operation on the panel. After the backlight turns off, it illuminates again when any key is pressed.	Installation / Wiring

[Load tracking monitoring function]


- When the reference load ratio is written, SET appears at the upper right of the LCD display for **one second**.
- When the High1 detection level reaches or exceeds 200%, "NG" is displayed.
- You can write the reference load ratio manually by pressing the ▲ and ▼ keys simultaneously while the motor is running.

PW	58%	SET
H1: 10		H2: 100

PW	58%	NG
H1: 10		H2: 100


■ Timing chart

High2 output

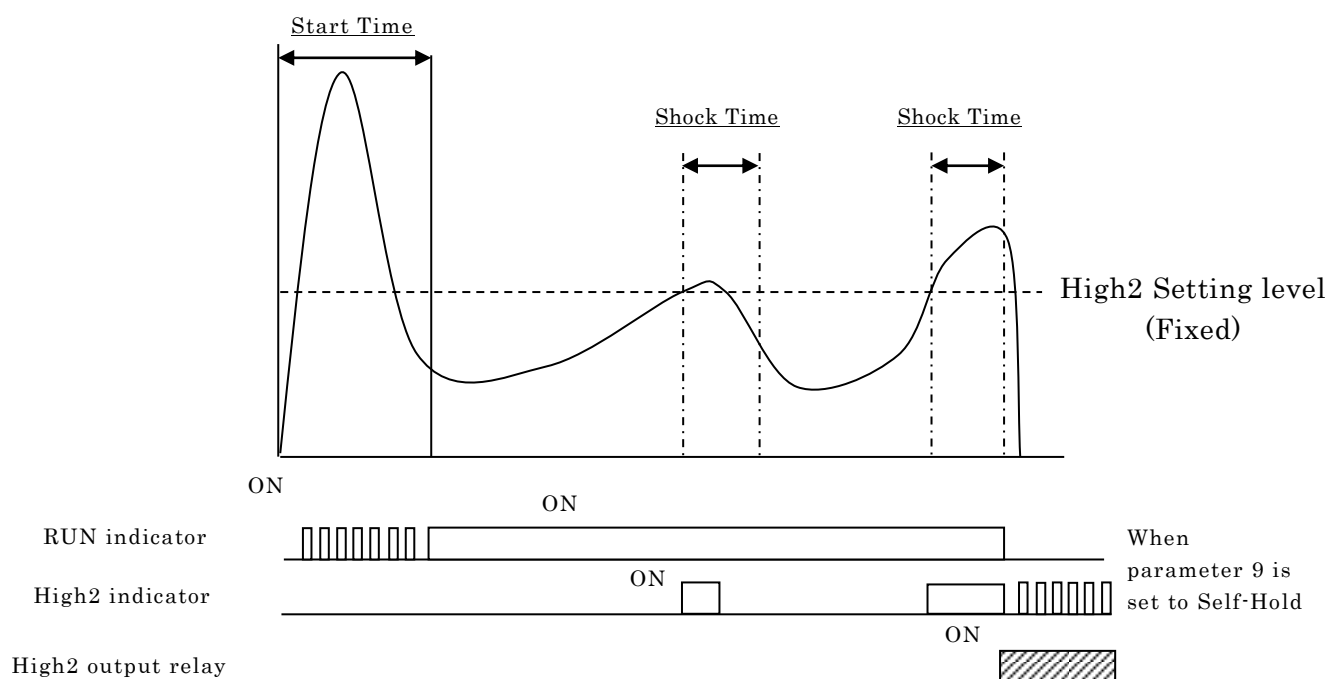


High1 output

12:Offset Mode
(1)Interval

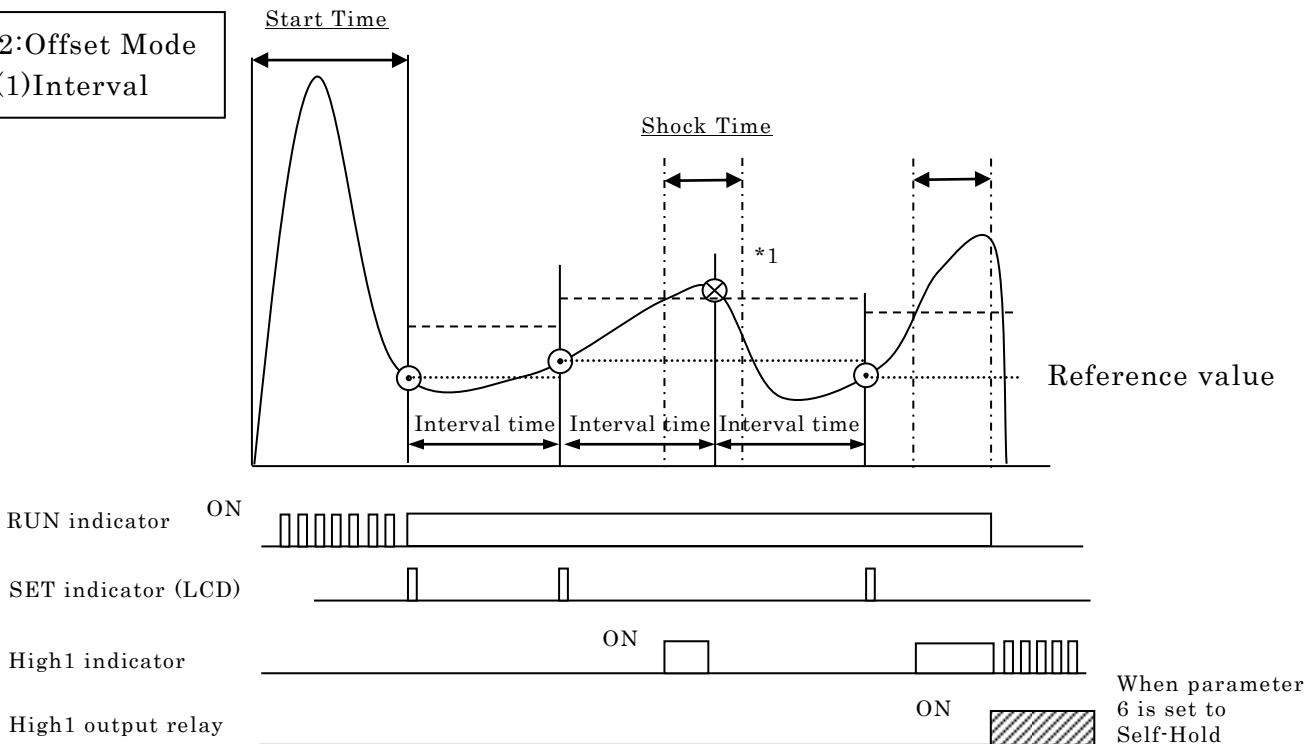

- *1: During the Shock Time period, writing of the operating level is disabled. (The value of the last automatic writing is used for judgment.)
- *2: If the load continues increasing over the period longer than the writing cycle, High1 does not turn on. Be sure to use High2 output together so that overload can be detected.

12:Offset Mode
(2)X1

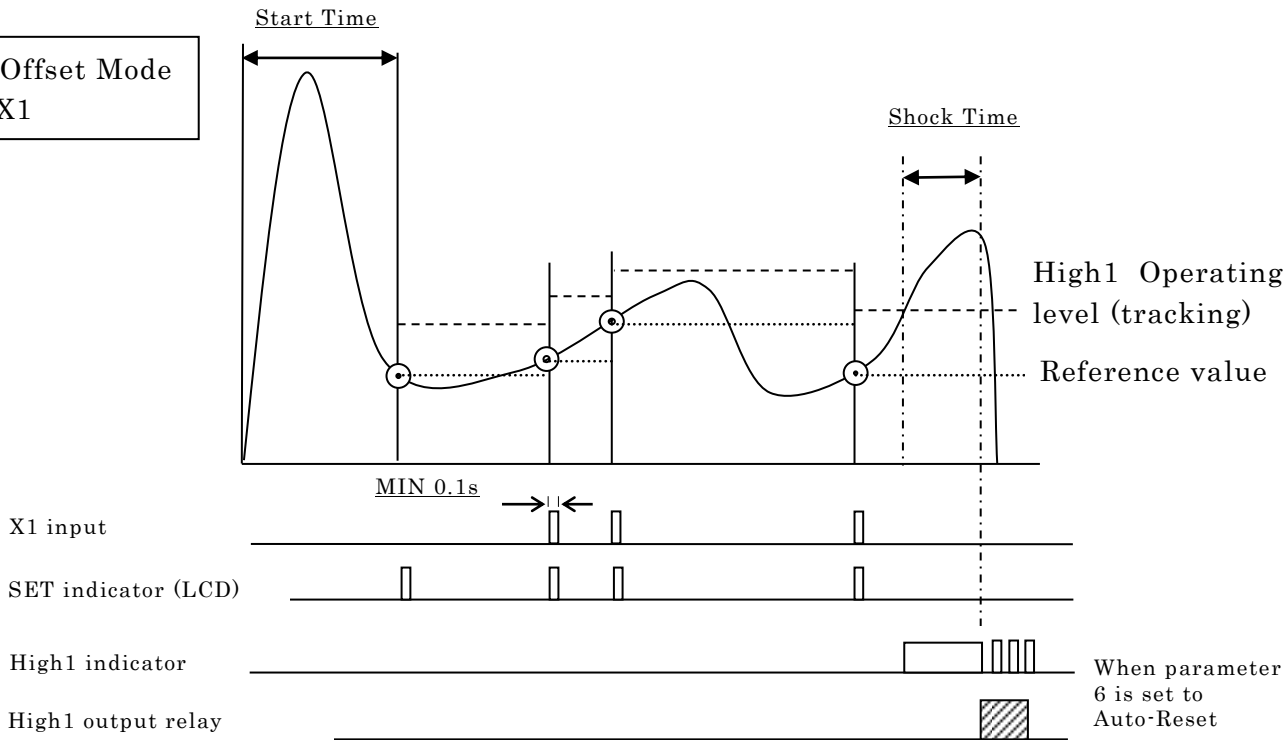

11. Troubleshooting

Problem	Inspection item	Inspection result	Countermeasure	Contents
The LCD display shows nothing.	Wiring of the operational power supply (Between terminals 11 and 12)	No wiring installed.	Install the wiring properly.	Safety
	Operational power supply voltage (Between terminals 11 and 12)	Less than 90 VAC	Provide voltage of 90 to 250 VAC.	
		90 to 250 VAC	Replace or repair Shock Monitor.	
The LCD display is illegible.	Adjust the contrast (Refer to page 9.).	The display becomes dark.	Re-adjust the contrast.	Usage /Names
		The display does not improve.	Replace or repair Shock Monitor.	
Output is activated immediately after Shock Monitor starts.	In the Program mode, check the setting value of <u>3:Start Time</u> .	Short	Set a little longer value.	Installation /Wiring
		Long (It is clear that the output is activated within the setting value.)	Replace or repair Shock Monitor.	
Even when a long value is set to <u>3:Start Time</u> (20 seconds max.), the relay is activated as soon as the time is up.	Startup time of the motor	Longer than 20 seconds	Review the motor capacity.	Terminals
	Acceleration time of the inverter		Set a shorter acceleration time.	
	In the Monitor mode, check the load ratio and setting level at startup.	The setting value is small.	Set a larger value in the Program mode.	
Wrong detection level is selected.		Check the process switching input.		
The load ratio is shown as 0%.	Is the current sensor and main unit connected?	The sensor cable is disconnected.	Connect the cable properly.	Connection
	Does the V-phase motor wire pass through the current sensor?	• No wire passes through the sensor. • Other phase	Install the wiring properly.	
	Check the wiring of the voltage input U, V, W (Terminals 1, 2, 3).	• No wiring installed or wiring is disconnected. • Incorrect wiring	Install the wiring properly.	
Although the motor starts, the displayed load ratio is wrong with respect to the actual load.	Model number of the current sensor	Wrong	Replace with a correct sensor.	Operation
	Does the V-phase motor wire pass through the current sensor?	Other phase (U-phase or W-phase)	Install the wiring properly.	
	Is the No. of times to pass the wire through the sensor correct?	Wrong		
	Check the wiring of the voltage input U, V, W (Terminals 1, 2, 3).	• No wiring installed or wiring is disconnected. • Incorrect wiring	Install the wiring properly.	
	In the Monitor mode, check that the correct motor has been selected.	The selection does not correspond with the actual motor.	Set the parameters (1 and 2) properly.	
	Start the motor, change the display screen, and check the voltage and current values.	The load ratio far deviate from the displayed current value.	Repair Shock Monitor. Replace Shock Monitor.	
The displayed load ratio is negative.	Is the motor operation status negative torque?	Rapid deceleration is caused by inverter operation.	If the actual torque is negative, the display is not abnormal.	Maintenance /Inspection
		The operation is affected by load.	If the actual torque is negative, the display is not abnormal.	
	Check the wiring of the voltage input U, V, W (Terminals 1, 2, 3).	• No wiring installed or wiring is disconnected. • Incorrect wiring	Install the wiring properly.	Specifications
	Does the motor wire pass through the current sensor in the right direction? (Does the direction match with the arrow on the top of the current sensor?)	Opposite direction	Install the wiring properly.	
		The load torque is positive and the motor wire correctly passes through the current sensor.	• Replace Shock Monitor. • Repair Shock Monitor.	
Although the load ratio display is correct, the relay output is not activated.	In the Monitor mode, check the level setting values.	The level setting values are not set properly.	Set appropriate values.	Dimensions
	In the Program mode, check the Shock Time.	Too long.	Set a shorter value.	

Problem	Inspection item	Inspection result	Countermeasure
The LED indicator (High1, High2) illuminates, but the relay output is not activated.	Is the load fluctuation too great?	The load fluctuates greatly and it instantaneously exceeds the setting level repeatedly.	Set the parameters (4, 7, and 10) properly.
		The load does not fluctuate and there is a great difference from the setting level.	Repair Shock Monitor.
The relay output is activated as soon as Shock Monitor is turned ON.	Is the motor starts when Shock Monitor is turned ON?	The displayed load is larger than the setting value.	Set the parameters (4 and 7) properly.
		The output is activated even when the motor is stopped and the displayed load is 0. (Shock Monitor is used in a highly humid environment with corrosive gas.)	Repair Shock Monitor.

12. Trip Reset Procedure

- (1) Inspect the equipment for any abnormalities.
- (2) If an abnormality is found, eliminate the cause and reset the equipment to normal status.
- (3) If the relay output is in self-holding status, press the RESET key to reset it. To use an external signal to reset the relay, short-circuit 11 (RST) and 4 (COM) in the connector CN1. The reset is also possible by turning off the operational power supply for the Shock Monitor for a short time.
- (4) After confirming steps (1), (2), and (3), restart the equipment.

13. Precautions on Maintenance/Inspection

Be sure to observe the following during the maintenance/inspection work.

- (1) To prevent secondary damage, clean up the surrounding area and ensure safety during the work.
-  (2) Before inspecting the installation or connection of the Shock Monitor, be sure to turn off the power to make the machine completely stop and the LCD display of the Shock Monitor completely turn off. Ensure that the Shock Monitor will not be turned on accidentally.
- (3) Observe the guidelines listed in the Labor Safety and Health Regulation.
-  (4) When conducting a megger test or dielectric withstanding voltage test, remove the Shock Monitor main unit from the socket to avoid test voltage.

14. Periodic Inspection

- (1) Inspect that the "MOTOR" LED indicator of the Shock Monitor illuminates while the motor is running, and the load ratio value on the LCD display is normal. (Daily inspection)
- (2) In the Test mode, inspect the operation of the relay outputs Low, High1, and High2 on a regular basis.
- (3) Inspect for looseness in the installation of the Shock Monitor main unit and current sensor on a regular basis.
- (4) Inspect for looseness in the terminal connection of the Shock Monitor main unit and sensor cable connection on a regular basis.
- (5) Although the life of the Shock Monitor varies depending on the installation environment and operating time, **the life of the electrolytic capacitor is normally about 10 years under continuous energization at annual average ambient temperature of 30°C**. It is recommended to overhaul the Shock Monitor or replace it with a new one before any problem occurs.
- (6) The brightness of the LCD display varies depending on the ambient temperature and operating time. If the display becomes illegible, adjust the contrast.

Perform the periodic inspection during trial operation, and when the equipment was moved, and when the wiring was changed.

15. For Your Safety

- (1) If any danger is expected as a result of the operation of Shock Monitor, be sure to take measures to avoid such danger.
- (2) Also, give due consideration on the equipment side so that, even if Shock Monitor does not operate normally, no dangerous situation would develop.

16. Specifications


Model number			TSM4000H2	TSM4000H2P	Contents
Applicable motor		Capacity	0.1 to 110 kW		
		Voltage	3-phase, 200/220 VAC or 400/440 VAC		
		Power supply frequency	5 to 120 Hz		
Operational power supply voltage			Commercial power supply 90 to 250 VAC 50/60 Hz, 90 to 250 VDC No polarity		Usage /Names
Input	Terminals 1, 2, 3		250 VAC max. *1		
	Current sensor		±15 V		
Setting	Power setting range	Upper limit 1 (High1)	1 to 99%		Installation /Wiring
		Upper limit 2 (High2)	5 to 200%		
	Start Time setting range		0.1 to 20.0 s		
	Shock Time setting range		MIN or 0.1 to 10.0 s When the motor power supply frequency is 50 Hz or more, the Shock Time for "MIN" is approximately 50 ms. *2		
	Response		QUICK, NORMAL, SLOW		
Display	Power percentage display range		0 to +200%		Terminals
	Voltage display range		0 to 500 V (Resolution: 1% of motor rated voltage)		
	Current display range		0.01 to 999 A (Resolution: 1% of motor rated current)		
	Frequency display range		5 to 120 Hz		
Output	Relay contact output (Low, High1, High2)	Contact capacity	1c contact: 250 VAC, 0.5A (Inductive load cosφ = 0.4) 30 VDC, 0.4 A (Inductive load) 110 VDC, 0.2A (Inductive load)		Connection
		Minimum load	24 VDC, 4 mA		
		Life	100,000 times of operation		
	Analog output signal		0 to 10 VDC		Operation
Other	Test function		Operation check of relays Low, High1 and High2 in Test mode		
	Peak-hold function		Displays the maximum load ratio determined while High1 or High2 is illuminating or flashing.		
Power consumption			10 VA (Inrush current 5A within 5 ms)		Maintenance /Inspection
Approximate weight			1.0 kg		
Operating environment		Ambient temperature	0 to +50℃		Specifications
		Relative humidity	45 to 85% RH, no condensation		
		Altitude	1,000 m max.		
		Vibration	4.9 m/s ²		
		Atmosphere	No oil mist, corrosive gases, and dust		
Mounting			DIN rail, screw mounting	Panel mounting	

Note) *1. To use a 400/440 VAC motor, the optional 400 V class resistor "TSM4-PR1" is required.


*2. When the motor power supply frequency is less than 50 Hz, the Shock Time for "MIN" is 2 cycles of the power supply frequency + Approx. 10 ms. (Example for the case of 50 Hz: 40 + 10 = 50 ms)

17. Outer Dimensions

■ Main unit TSM4000H2

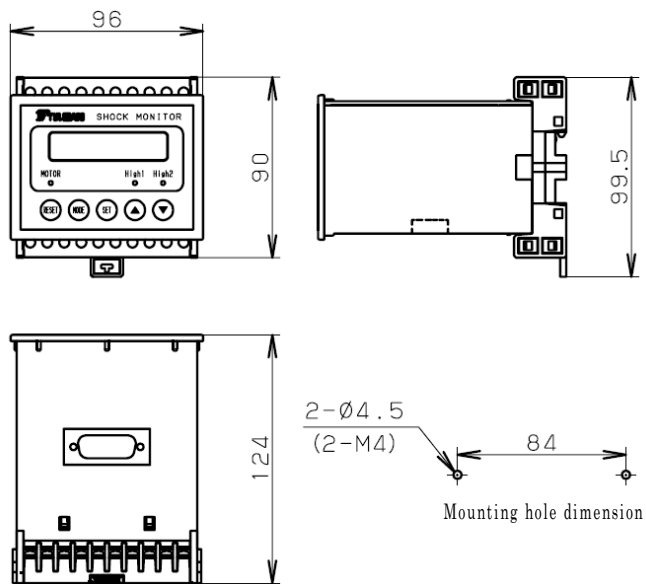


TSM4000H2P

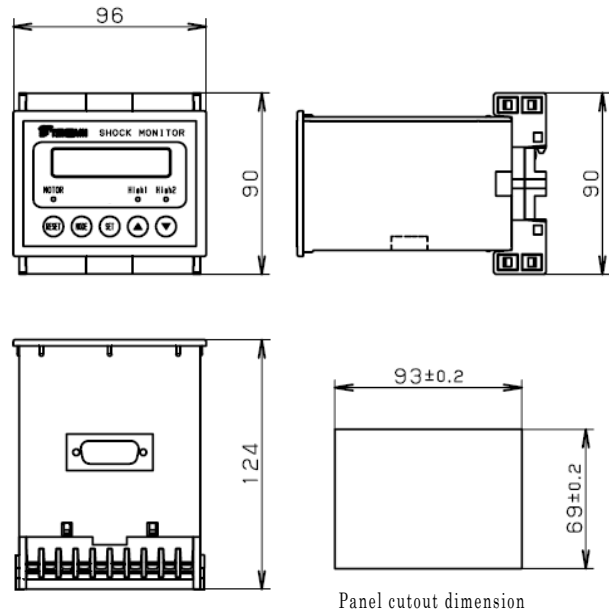


■ Current sensor


TSM-U010, TSM-U050, TSM-U100
TSM-U150, TSM-U200

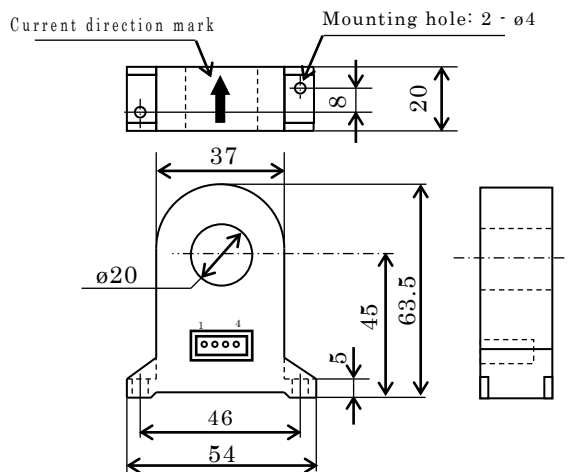


TSM-M300, TSM-M400, TSM-M600
TSM-M800

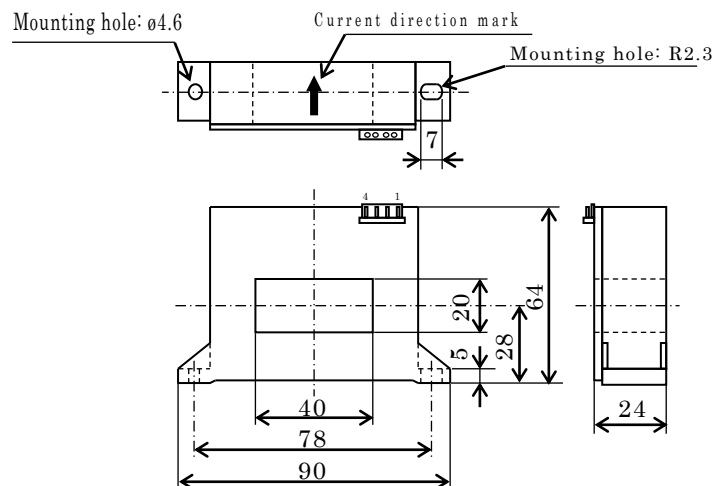

■ 400 V class resistor TSM4-PR1

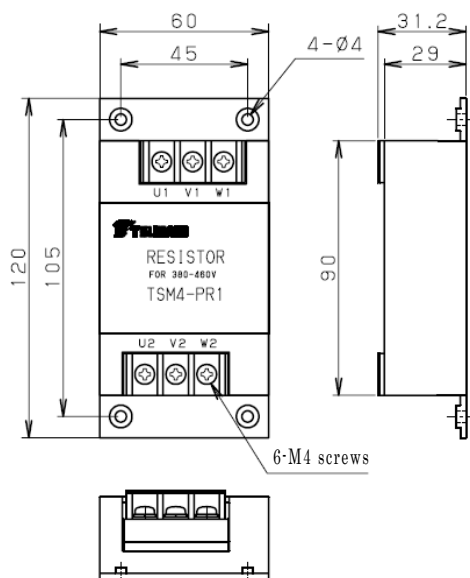


■ Panel mounting bracket (for TSM4000H2P) TSM4-PL1

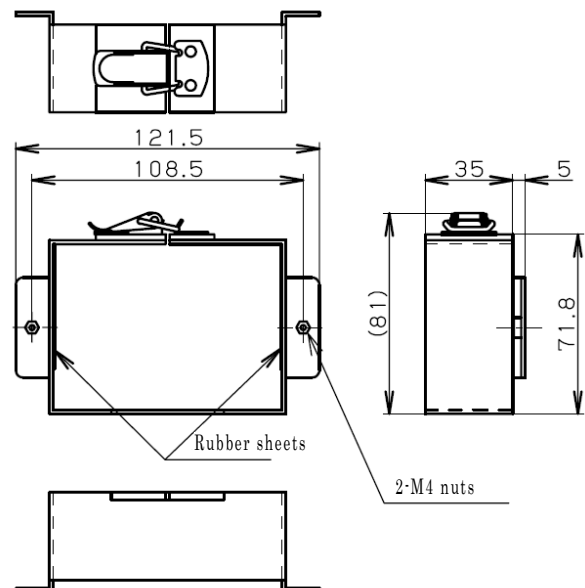


■Sensor cable

TSM4-S01, TSM4-S03, TSM4-S05
TSM4-S10, TSM4-S20, TSM4-S30

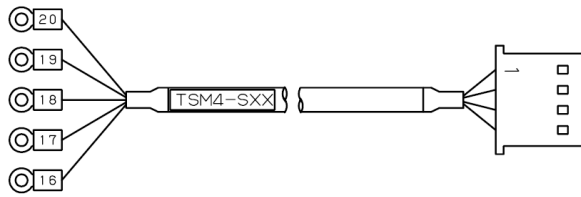

■I/O cable

 TSM4-C01
TSM4-C03



18. Warranty

18.1 Free warranty period

TC shall offer free warranty period of 18 months after the shipment from the factory or 12 months after the beginning of the use (counted from the completion of the installation of the TC product into your equipment), whichever is shorter.

18.2 Warranty coverage

Any failure or malfunction occurred in the TC product within the free warranty period shall be repaired or be handled by replacing the failed part with no charge through the return of the product to TC, as long as the proper installation, usage, and maintenance in accordance with the instruction manual are provided by the customer.

Note, however, that this free warranty shall cover only the TC product delivered to the customer and the following expenses shall not be covered by the warranty.

- (1) The cost for the removal or installation of the TC product from or to the customer's equipment for the purpose of replacement or repair, and the cost associated with such work.
- (2) The transportation cost for sending the customer's equipment to the customer's repair plant or other place.
- (3) The lost earnings of the customer resulted from the failure and/or repair, as well as other increased damages.

18.3 Paid warranty

Even within the free warranty period, if a failure or malfunction occurs in the TC product due to any of the following causes, the investigation/repair shall be charged.

- (1) The customer did not install the TC product properly in accordance with the instruction manual.
- (2) The customer did not handle the product properly and/or did not provide sufficient maintenance.
- (3) The failure or malfunction was resulted from improper connection between the TC product and other equipment.
- (4) The customer changed the structure of the TC product such as modification.
- (5) The TC product was not repaired at TC or TC-designated plants.
- (6) The TC product was not used in the appropriate operating environment described in the instruction manual.
- (7) The failure or malfunction was caused by force majeure such as disasters or by illegal behavior of a third party.
- (8) The failure of the TC product was caused incidentally by the malfunction of the customer's equipment.
- (9) The failure was caused by the installed customer-supplied part or by the part used in accordance with the designation of the customer.
- (10) The failure was caused by failed wiring or incorrect parameter setting conducted by the customer.
- (11) The product has reached its life which is normal for the operating condition.
- (12) Damage occurred due to the cause for which TC was not liable.

This image shows a full page of white paper with horizontal dashed lines, typical of primary-ruled notebook paper. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a full page of primary-ruled paper. It features multiple sets of horizontal dashed lines spaced evenly down the page, providing a guide for handwriting practice. The lines are black and extend across the entire width of the page. There are no margins, text, or other markings present.

倍电阻

(本资料是中国 RoHS 的必备资料)



○：表示该零部件所有均质材料中有害有毒物质的含量均在 GB/T 26572 标准规定的限量要求以下。
Indicates that the concentration of the hazardous substance in all homogeneous materials of the part is below the relevant threshold of the GB/T 26572 standard.

×：表示该零部件所有均质材料中有害有毒物质的含量超出 GB/T 26572 标准规定的限量要求。
Indicates that the concentration of the hazardous substance in at least one homogeneous material of the part is above the relevant threshold the GB/T 26572 standard

电流传感器

(本资料是中国 RoHS 的必备资料)



○：表示该零部件所有均质材料中有害有毒物质的含量均在 GB/T 26572 标准规定的限量要求以下。
Indicates that the concentration of the hazardous substance in all homogeneous materials of the part is below the relevant threshold of the GB/T 26572 standard.

×：表示该零部件所有均质材料中有害有毒物质的含量超出 GB/T 26572 标准规定的限量要求。
Indicates that the concentration of the hazardous substance in at least one homogeneous material of the part is above the relevant threshold the GB/T 26572 standard



TSUBAKIMOTO CHAIN CO.

1-1, Kohtari-Kuresumi, Nagaokakyo

Kyoto 617- 0833, Japan

Internet : <https://tsubakimoto.com/>

U.S. Tsubaki Power Transmission, LLC

<https://www.ustsubaki.com/>

Tsubaki of Canada Limited

<https://tsubaki.ca/>

Tsubaki Australia Pty. Limited

<https://tsubaki.com.au/>

Tsubakimoto Singapore Pte. Ltd.

<https://tsubaki.sg/>

Taiwan Tsubakimoto Co.

<https://tsubakimoto.com.tw/>

Tsubakimoto Chain (Shanghai) Co., Ltd.

<https://tsubaki.cn/>

Tsubakimoto Europe B.V.

<https://tsubaki.eu/>

Tsubakimoto U.K. Ltd.

<https://tsubaki.eu/>

Tsubakimoto Korea Co., Ltd.

<https://tsubakimoto-tck.co.kr/>