

Instruction Manual ECHT-FLEX COUPLING

Clamping Type

NEF02(04,10,18,25,45) □-□□□CX□□□C

Thank you for purchasing an ECHT-FLEX COUPLING . Make sure the unit delivered matches your order and no shortages exist in the parts provided. Any such shortages or other delivery errors must immediately be reported to your distributor.

This manual is an essential part of the ECHT-FLEX COUPLING, and it should remain with the product at all times including when re-distributed. To ensure safety, read all instructions thoroughly before installing or working on the equipment.

Safety precautions in this manual are classified into two categories: "WARNING" and "CAUTION". These are defined as follows:

WARNING	Death or serious injury may result from misusing the product without following the instructions.
CAUTION	Minor or moderate injury, as well as damage to the product may result from misusing the product without following the instructions.

Notice that although categorized under "CAUTION", subjects discussed may lead to serious results depending on the situation.

WARNING

- (General)
- Install a safety cover and prevent access to any rotating parts. Otherwise injury may occur. Set a safety mechanism to stop the rotating parts when the cover is lifted.
 - Transporting, installing, operating, maintaining or inspecting must be carried out by skilled and professional engineers to avoid mis-handling and hazardous situations.
 - When the coupling is used with vehicles for transporting humans, install a suitable protection device on the vehicle. Otherwise, it could fall and result in accidents and damage the equipments.
 - When the coupling is used for an elevator, install a safety device on the elevator in order to prevent it from falling, which can cause accidents resulting in death, injury or damage to the equipments.
- (Unpacking upon delivery)
- If delivered in a wooden case, unpack with care. Sharp nails may cause injury.
- (Additional machining)
- Never modify the coupling. The quality or function of the product may decrease and may break or damage the machine or injure the operator.
- (Transportation)
- Never step under the product when it is elevated for transportation, otherwise either the product or load may fall, causing accidents resulting in death or injury.
- (Installation)
- Wear protective clothing and gears (safety goggles, gloves, shoes, etc.).
 - Make sure the power is switched off, and the machine is completely stopped before installing. Take caution so that the power is not switched back on accidentally.
 - Make sure to tighten and apply anti-loosening agent sufficiently.
- (Operation)
- Avoid contact with any rotating parts (coupling, shaft, etc.) during operations. Rotating parts can catch approaching objects and cause serious injuries.
- (Maintenance and inspection)
- Avoid contact with any rotating parts (coupling, shaft, etc.) during maintenance and inspection. Rotating parts can catch approaching objects and cause serious injuries.
 - Make sure the power is switched off, and the machine is completely stopped before carrying out maintenance and inspection.
 - Take caution so that the power is not turned back on accidentally.
 - Make sure the drive and driven equipments are also completely stopped.

CAUTION

- (General)
- Do not use coupling beyond its capacity as specified in the drawing. Exceeding its capacity can break the machine and cause injuries.
 - Do not use damaged couplings. They can break your equipments and cause injuries.
- (Transportation)
- Pay extra attention so that the equipment will not fall or rollover during transportations.
- (Installation)
- Do not touch the inner diameter and edge of each part with bare hands, and avoid possible injury.
 - Align the drive and driven shafts to install the coupling as instructed in the manual.
- (Operation)
- Do not touch the coupling during operation s to avoid injuries.
 - Immediately stop the machine upon any sign of abnormal operation.
- (Maintenance and inspection)
- Wear protective clothing and gears (safety goggles, gloves, shoes, etc.).
 - Clean the surrounding area and maintain a clutter-free space to avoid secondary accidents.
 - Comply with Ordinance on Labor Safety and Hygiene 2-1-1 general standards.
 - Periodically check that the drive and driven shafts are aligned as described in the manual. In addition, also check that the rubber and plastic parts are not worn or deformed.
- (Environment)
- Coupling scraps should be disposed as general waste by skilled professionals.
 - This coupling meets RoHS (Restriction of certain Hazardous Substances) standards and contains no hazardous chemicals.

1. Structure and Parts

Figure 1: Single type
NEF02S - NEF45S

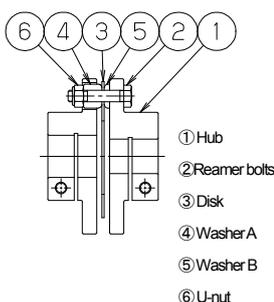


Figure 2: Spacer type
NEF02W


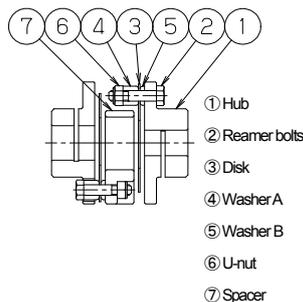


Figure 3: Spacer type
NEF04W - NEF45W

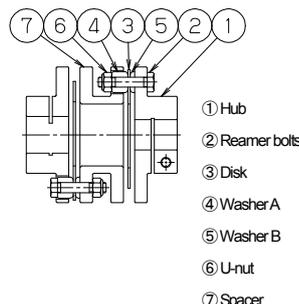

The hub integrates a clamp bolt, or a clamp bolt and a U-nut.

Table 1: Component list (parts and quantities that make for one coupling set)

	Hub	Disk set	Reamer bolt	Washer A	Washer B	U-nut	Spacer
Single type NEF02S - NEF45S	2	1	4	4	4	4	--
Spacer type NEF02W - NEF45W	2	2	8	8	8	8	1

Note: The hub integrates a clamp bolt, or a clamp bolt and a U-nut.

2. Mounting

- (1) Compare the supplied coupling components to those listed in Table 1.
- (2) The disks in an NEF set are held together by tape for the purpose of maintaining the positional relations between the disks. Use the disk set as is.
- (3) Check for burrs, scratches, dirt and rust on the drive and driven shafts and the inner diameter of the hub. Wipe off any dirt or grease found.
- (4) Mount a hub on each shaft. Adjust the hub's mounting position and phase, and tighten the clamp bolts with the tightening torque specified in Table 2.
- (5) Place each device in its respective position. Following the instructions provided in Section 3, center the space between hubs.
- (6) Set the disk set, washer, bolt, and the u-nut to their allocated positions by referring to Figures 1 through 3. The bolts and disk bores are accurately machined using reamer technique. For tightening, turn the U-nuts instead of the bolts in order to avoid damage. Make sure to tighten the U-nuts according to the "Tightening torque for U-nut" provided in Table 4.

When clamping onto the shaft, the clamp bolt should be tightened using a torque wrench, with the tightening torque specified in Table 2.

Depending on the size and shaft bore diameter, the clamp's transmitted torque may fall below the coupling's allowable torque.

In such a case, note that the clamp's transmitted torque becomes the coupling's transmitted torque.

Table 2: Clamp bolt tightening torque and coupling's allowable torque

Type No.	Shaft bore diameter φ mm	10	12	14	15	16	17	18	19	20	22	24	25	28	30	32	35
NEF02	Bolt size	M4															
	Tightening torque N·m {kgf·m}	4.02 {0.41}															
	allowable torque N·m {kgf·m}	18.6 {1.9}	19.6 {2.0}														
NEF04	Bolt size	M4															
	Tightening torque N·m {kgf·m}	4.02 {0.41}															
	allowable torque N·m {kgf·m}	17.6 {1.8}	30.4 {3.1}	34.3 {3.5}	37.2 {3.8}	39.2 {4.0}											
NEF10	Bolt size	M6													M5		
	Tightening torque N·m {kgf·m}	13.7 {1.4}													8.3 {0.85}		
	allowable torque N·m {kgf·m}	85 {8.68}				94 {9.6}		98 {10}									

Type No.	Shaft bore diameter φ mm	19	20	22	24	25	28	30	32	35	38	40	42	45	50	55	
NEF18	Bolt size	M6															
	Tightening torque N·m {kgf·m}	13.7 {1.4}															
	allowable torque N·m {kgf·m}	109 {11.0}	113 {11.5}	126 {12.9}	136 {13.9}	143 {14.6}	176 {18}										
NEF25	Bolt size						M8					M6					
	Tightening torque N·m {kgf·m}						34.3 {3.5}					13.7 {1.4}					
	allowable torque N·m {kgf·m}						245 {25}					230 {23.5}	239 {24.4}	245 {25}			
NEF45	Bolt size								M8								
	Tightening torque N·m {kgf·m}								34.3 {3.5}								
	allowable torque N·m {kgf·m}				363 {37.0}		372 {38.0}		393 {40.1}		416 {42.4}		429 {43.8}		440 {44.9}		441 {45}


Recommended shaft diameter tolerance = h7

* However, recommended shaft diameter tolerance for φ35 is -0.015 to +0.010.

3. Centering

The greater the accuracy of the initial centering of the coupling, the less eccentric rotational stress will occur during use.

Bearing wear, depressions on the mounting surface, changes in conditions caused by temperature fluctuations, and shock may all result in a shorter service life for the coupling as well as your equipment. Perform adjustment on a periodic basis by following the procedure below.

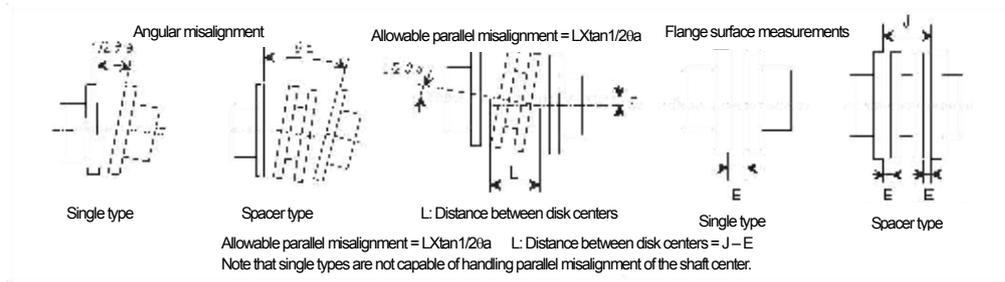

The coupling's allowable angular misalignment, parallel misalignment, and axial misalignment are all correlated. Therefore, they must be considered collectively, because when one increases, the other will decrease.

Perform the initial centering within the recommended values provided below.

Relationship between parallel misalignment and angular misalignment for spacer types

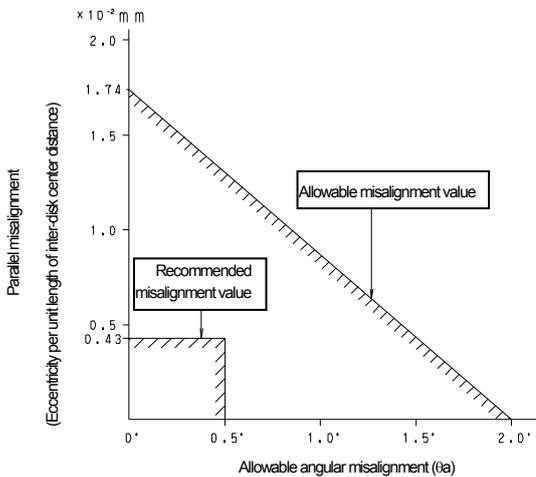



Table 2: Recommended misalignment values

Type No.	Angular Misalignment		Parallel Misalignment	Axial Misalignment	
	θ (deg)	T.I.R (mm)	ε (mm)	E (mm)	
Single type	NEF02S	0.25	0.25	* Note N/A	4.9±0.25
	NEF04S	0.25	0.29		6.1±0.25
	NEF10S	0.25	0.35		6.6±0.25
	NEF18S	0.25	0.40		8.3±0.25
	NEF25S	0.25	0.45		11.2±0.25
	NEF45S	0.25	0.55		11.7±0.25
Spacer type	NEF02W	0.5	0.50	0.075	4.9±0.25
	NEF04W	0.5	0.58	0.13	6.1±0.25
	NEF10W	0.5	0.71	0.14	6.6±0.25
	NEF18W	0.5	0.81	0.17	8.3±0.25
	NEF25W	0.5	0.91	0.18	11.2±0.25
	NEF45W	0.5	1.10	0.22	11.7±0.25

Note: Single types cannot accommodate parallel misalignment due to the nature of their structure.


When centering, adjust to within a misalignment of 0.02 mm.

(1) Adjusting the flange surface measurements E (mm)

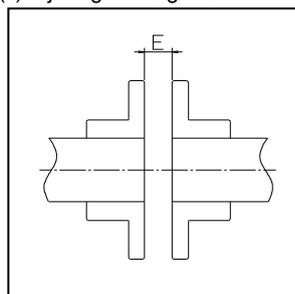


After measuring E at four points (90° intervals), adjust the position of the hub so that the average of E measurements falls within the proper E dimensions. If the drive or driven shaft has steps, the adjustable range may be limited; in such a case, plan the possible E adjustments prior to performing the actual adjustment.

(2) Adjusting the angular misalignment θ (deg)

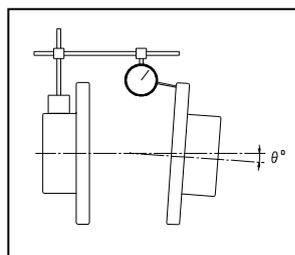

(a) Fix the dial gauge onto one of the hubs as shown in the figure. Turn the hub to find the minimum reading on the dial gauge and set to zero.
 (b) Turn the hub on the dial gauge side 360° and read the angular misalignment value.
 (c) Use a shim or another spacer to adjust the equipment so that the dial gauge reading falls within the range of recommended angular misalignment values listed in Table 2.

(3) Adjusting the parallel misalignment ϵ (mm)

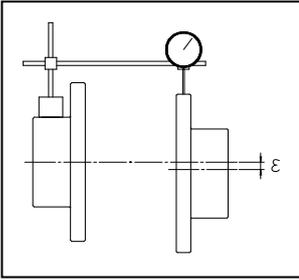

(a) Mount the dial gauge onto the hub flange as shown in the figure. Turn the hub to find the minimum reading on the dial gauge and set to zero.

(b) Turn the hub that is fixed with the dial gauge 360° and read the parallel misalignment value.

- (c) At the hub's pilot hole, the outer circumferential run-out may be excessive. This is due to the flange expanding radially outward when machining the pilot hole. Avoid measuring in these areas.
- (d) Use a shim or another spacer to adjust the equipment so that the dial gauge reading falls within twice the recommended parallel misalignment values (ϵ) provided in Table 3.
- (e) If the equipment has been moved for the adjustment of parallel misalignment, re-adjust the angular misalignment.

Table 4: Tightening torque for U-nut

Type No.	U-nut tightening torque N·m {kgf·m}	U-nut size	Spanner size Face-to-face measurement (mm)
NEF02	4.90 { 0.5 }	M5	8
NEF04	8.82 { 0.9 }	M6	10
NEF10	8.82 { 0.9 }	M6	10
NEF18	21.6 { 2.2 }	M8	13
NEF25	21.6 { 2.2 }	M8	13
NEF45	41.2 { 4.2 }	M10	17

- (4) Repeat the above steps until all positional settings are properly set for the coupling.
- (5) Tighten all U-nuts with the specified torque provided in Table 4. Echt-Flex couplings transmit torque via the static friction force between disk and washer that is generated by the clamping force of the reamer bolt. As such, make sure to use the proper tightening torque for the reamer bolt as specified in Table 4. The U-nut is made of metal, and can be mounted and dismantled up to 20 times. Replace with a new U-nut after the number of remounts has been exhausted.
- (6) Special instructions
After operating the equipment for one to two hours, check the angular misalignment and parallel misalignment again. At this time, tighten the U-nuts again using the specified torque provided in Table 4. At half-year to year intervals, check for loose U-nuts and other anomalies in parts.

Warranty

TSUBAKIMOTO CHAIN CO.: hereinafter referred to as "Seller"
Customer: hereinafter referred to as "Buyer"
Goods sold or supplied by Seller to Buyer: hereinafter referred to as "Goods"

1. Warranty period without charge

18 months effective the date of shipment or 12 months effective the first use of Goods, including installation of Goods to Buyer's equipment or machines - whichever comes first.

2. Warranty coverage

Should any damage or problem with the Goods arise within the warranty period, given that the Goods were operated and maintained under instructions provided in the manual, Seller would repair and replace at no charge once the Goods are returned to Seller. The following are excluded from the warranty.

- 1) Any costs related to removing Goods from the Buyer's equipment or machines to repair or replace parts.
- 2) Costs to transport Buyer's equipment or machines to the Buyer's repair shop.
- 3) Costs to reimburse any profit loss due to any repair or damage and consequential losses caused by the Buyer.

3. Warranty with charge

Seller will charge any investigation and repair of Goods caused by:

- 1) Improper installation by failing to follow the instruction manual.
- 2) Insufficient maintenance or improper operation by the Buyer.
- 3) Incorrect installation of Goods to other equipment or machines.

- 4) Any modifications or alterations of Goods by the Buyer.
- 5) Any repair by engineers other than the Seller or those designated by the Seller.
- 6) Operation in an inappropriate environment not specified in the manual.
- 7) Force Majeure or forces beyond the Seller's control such as natural disasters and injustice done by a third party.
- 8) Secondary damage or problem incurred by the Buyer's equipment or machines.
- 9) Defected parts supplied, or specified by the Buyer.
- 10) Incorrect wiring or parameter setting by the Buyer.
- 11) The end of life cycle of the Goods under normal usage.
- 12) Loss or damage not liable to the Seller.

4. Dispatch Service

Service to dispatch a Seller's engineer to investigate, adjust or trial test Seller's Goods is at the Buyer's expense.

5. Disclaimer

- 1) In our constant efforts to improve, TSUBAKIMOTO CHAIN may change the contents of this document without notice.
- 2) Considerable effort has been made to ensure that the contents of this document are free from errors. However, TSUBAKIMOTO CHAIN makes no warranties with respect to the accuracy of information described herein. In the mean time, we would appreciate comments or reports on any inaccuracies or omissions found in this document to help us make timely amendments as necessary. Your cooperation is greatly appreciated.

TSUBAKIMOTO CHAIN CO.

Global Associated Partners:

U.S. Tsubaki Power Transmission, LLC

<http://www.ustsubaki.com/>

Tsubaki of Canada Limited

<http://tsubaki.ca/>

Tsubaki Australia Pty. Limited

<http://tsubaki.com.au/>

Tsubakimoto Singapore Pte. Ltd.

<http://tsubaki.sg/>

Taiwan Tsubakimoto Co.

<http://tsubakimoto.com.tw/>

Tsubakimoto Chain (Shanghai) Co., Ltd.

<http://tsubaki.cn/>

1-1, Kohtari-Kuresumi, Nagaokakyo
Kyoto 617- 0833, Japan

Website: <http://tsubakimoto.com/>

Tsubakimoto Europe B.V.

<http://tsubaki.eu/>

Tsubakimoto U.K. Ltd.

<http://tsubaki.eu/>

Tsubakimoto Korea Co., Ltd..

<http://tsubakimoto-tck.co.kr/>